<u>การ Create Point และ Export Point</u>

Autodesk Land Desktop 2006	(Project: BangPlang] - [D:\La	and Projects 2006\SangPlang	\dwg\BangPlang.dwg)					
File Edit View Insert F	format Tools Draw Dir	mension Modify Map P	rojects Points Lines/Curves Alignmen	ts Parcels Labels Terrain Inqui	ry Utilities Window H	elp Express Image		_ 8 ×
	00115·)- 📽 🔍 🔍 👯	El In Steint Settings		388			
S VQ . 100 0		- 🅦 💰 🔰 Land Destop Cr	omplete Point Management	- ByLayer	+ ByLayer	- ByColor		
		144	⊆reate Points					A
			Create Points - Intersections					
			Create Points - Augnments Create Points - Surface					
			Create Points - Slgpe	•				_
			Create Points - Interpolgte	•				_
			Import/Egport Points	,				
			E List Points					
		1	Lock/Unlock Points		1			_
			Edit Points Check Points					_
			0 2 Jacob Dalatata Desultan					_
			Remove From Drawing					_
			Stateout					_
			Point Utilities					_
	3,200,600	3 200 #4 %	3 200 80 3 200	2 200 FOR	3 200 500	3 200 400	3 200 sam	_
								_
				25 400 500				_
				solog sche				_
								_
								_
								_
								_
								_
Y								_
4								_
								_
								_
								-
H + + H Model (Layout) / L	ayou/2				13	5 C		
L								
Parcel # 13	1 201							*
AREA first point *Ce	ancel#							
D[Consend :	and the second second							·
c soundes the pork creatory, interoc	an, ana display seconds.							

1.ทำการตั้งค่า Point ไปที่เมนู Point เลือก Point Settings...

Point Settings						— ×
Create Insert Up	date Coords D	escription Keys	Marker	Text	Preferences	
These settings contr	ol the creation of p	oints in the point	t database).		
Numbering						
📝 Insert To Drav	ving As Created	🗸 S	equential	Numberi	ing	
Current number:	1					
Elevations						
Automatic	Manual	None				
Default Elevation:	0.00	×				
Descriptions						
Automatic	Manual	None				
Default Description	n:					
			ОК		Cancel	Help

2. กำหนดการแสดงผล ตั้งค่า ตามภาพแล้วกด OK

Create Insert Update Coords Description Keys Marker Text Preferences Specify the Size and Shape of the Point Marker Symbol. Specify the Size and Shape of the Point Marker Symbol of the Point Mark
Specify the Size and Shape of the Point Marker Symbol.
Use Custom Marker O Use AutoCAD POINT for Marker
Custom Marker Style
Size: 0.30 Units
✓ Align Marker With Text Rotation
OK Cancel Help

3. กำหนดลักษณะ Point และ ขนาด Point ตั้งค่าตามภาพแล้วกด OK

Create Insert Update Coords Description Keys Marker Text Preferences Color and Visibility Color Color Image: Color Image: Color Image: Color Number: Image: Color Image: Color Image: Color Image: Color Image: Color Image: Color Image: Color Image: Color
Color and Visibility Component Visible? Number: Image: 2 Elevation: Image: 1
Component Visible? Color Number: 2 Elevation: 1
Number: 2 Elevation: 1
Elevation: 1
Description: 3
Show Raw Descriptions Show Full Descriptions
Style and Size
Text Style: Standard
Size Relative To Screen
Size In Absolute Units Size: 3.00 Units
Automatic Leaders Text Rotation: 45d0'0"
OK Cancel Help

4. กำหนดการแสดงของชื่อ ขนาด และทิศทาง ตั้งค่าตามภาพแล้วกด OK

File Edit View Insent Format Tools Draw Dimension Modify Map Projects Points Lines/Curves Alignments Parcels Labels Terrain Inquiry Utilities Window Help Express Image	the second se
	- # X
👒 👽 👁 🏷 🕐 🏷 🗈 0 🔹 🔸 Land Destop Complete	
Create Points * 👻 Manual	
Create Points - Igtersections	C31
Create Points - Alignments V Circetion	
Create Points - Sunder Point - Co. Quinter Angle Create Point - Stoce + Geoder Direct	
Create Points - Interpolate + 🛠 Besection	
Import/Egport Points	
€ List Points +\$ Automatic	
Lock/Unlock Points V 🔆 Along Line/Curve/Spiral	
Edit Points	
Check Points V Would Object	
S Insert Points to Drawing	
Bernove From Drawing C 20/vine/Contour Vertices - Manual	
Stakeout C Polyline/Contour Vertices - Automatic	
Point Utilities 6 7 8 9	
3,200 sq.m.	
25,600 sqn.	
A	
I C D D Madel (Layout) (Layout)	
	0.0
(Connend :	
Automatic save to C:\Users\airo\AppUata\Local\Temp\BangPlang_1_1_3977.sv8	(*)
U[Consend :	- 1ui -
Lieates pains a selected locations in your drawing.	

5. ทำการ Create Point

5.1 ไปที่เมนู Point เลือก Create Point เลือก Manual

Autodesk Land Desktop 2006 [Pr	roject: BangPlang] - [DALand	Projects 2006\BangPlang\dv	vg\BangPlang.dwg	Alignments Dread		Indian Mindau Links	Concern James		
						SE SE	express image		
QQ®2000		🔉 🚳 📗 Land Destop Comp	stete 🔸 📷 📗	D ByLayer	0yLayer	+ ByLayer	- ByColor -		0.5
N10100									â
▲目目載篇, 8.8.0.0.2.0	2 Endpoint 3.200 ² sq.m.	3 3.200 sq.n.	3,200 ⁴ зq.я.	5 3,200 =q.n. 25,60	3,200 sq.m. i sq.m.	7 3,200 sq.n.	8 3,200 sq.m.	9 3.200 sq.m.	
	Luyou2/					L			
Consend: Next point: >>									
Next point:									· · · · ·
5140 174, 2119 694, 0.000	SNAP GRID ORTH	HO POLAR OSNAP OTRAC	DYN LWT MODEL	1:2399.964			- A		Elevation: +0.000 😼 🕱 🖂 🗐 💕 🗸

6.คลิกซ้ายเลือกตำแหน่งที่ต้องการวาง Point



7.จะปรากฏ Point พร้อมชื่อลำดับ Point ขึ้นมา



8.ทำแบบเดิมให้ครบทุกจุดที่เราต้องการ



9.ไปที่ เมนู Point เลือก Import/Export Points เลือก Export Points... (ทำการส่งออก Point)

ormat:	PNEZD (comma delimi	ted) 🔻 🗐 🗌	OK
estination File:	C:\Users\alro\Desktop	\Point.csv 🔁	Cancel
Limit to Points in F		Help	
			Advanced
select Destinat	ion File		
Save in: 📃 Des	ktop	- G 🕸 😕	-
Librari Systen	es 1 Folder		Â.
alro Systen	n Folder		
Comp	uter		-
File name: Exp	ort_Point.csv		Save
Save as type: Co	mma Separated Values Files ((*.csv) 🔻	Cancel

10.ตั้งรูปแบบ Format และที่หมายในการส่งออก แล้วกด OK

		iome	Insert	t Paget	1000000 UK																							_
Image: Normal heats Image: Normal heats<	3 80				ayout	Formulas	Data	Review	View	Acr	obat																a 🕜 =	@ 23
Name U		at .		Calibri	- 11	· A .		-	æ	📰 Wra	p Text	Gener	al	•			N	ormal	8ad		Good			× 🔟	Σ AutoSu	** 27	and the	
• Openand Fort Aggment Name Parading - x lade + Openand	te de	apy -	Concession of Concession	виц	·18.	3+ - A	- # #		(in 6in	Men	ge & Center		% •	00. 00	Conditiona	Format	N	eutral	Calcul	lation	Check Cell		Insert Del	iete Format	O Change	Sort &	Find &	
TAL N C D F G H I J K L M N O P Q R S T U V W X 1 1 31.000 1 <	Clinha	ermax P	Painter		East				Allaner				Nomber		Formatting	 as Table 			Chulas						CZ Clear	Filter *	Select *	
A B C D E F G H J K L M N O P Q R S T U V W X 2 213549 536114 0 - <	Cipbo	10	14	16	rom.		Circline 1		Augmen	Ent		(#	Figmber	28					States					043		coming		-
A B C D E P G H I J K L M N O P G R S I U W X Z 1 2113.645 5360.174 0	1.1			6	JK			-																				
1 111509 3100-10 1 1 111509 3100-10 1 1 111509 3100-10 1 1 111509 3100-10 1 1 111509 3100-10 1 1 111509 3100-10 1 1 111509 3100-10 1 1 111509 3100-10 1 1 111509 3100-10 1 1 111509 3100-10 1 1 111509 3100-10 1 1 111509 3100-10 1 1 111509 3100-10 1 1 111509 3100-10 1 1 111509 3100-10 1 1 111509 3100-10 1 1 111509 3100-10 1 1 111509 3200-10 1 1 1 11509 3200-10 1 1 1 11509 3200-10 1 1 1	A	1 . 21	8	C 5140 174	0	E	Ŧ	G		н	1	1	K		. N	۹ <u>۰</u>	N	0	P	Q	R	5		U	. V .	W	x	-
1 100 10		3 31	110 684	5190.174	0																							
* 2 21364 200.1/4 0 * 4 21364 200.1/4 0 * 5 21364 200.1/4 0 * 7 21364 200.1/4 0 * 7 21364 200.1/4 0 * 7 21364 200.1/4 0 * 7 21364 200.1/4 0 * 7 21364 200.1/4 0 * 7 21364 200.1/4 0 * 10 200564 300.1/4 0 * 11 200564 300.1/4 0 * 11 200564 300.1/4 0 * 11 200564 300.1/4 0 * 11 200564 300.1/4 0 * 11 200564 300.1/4 0 * 11 200564 300.1/4 0 * 11 200564 300.1/4 0 * 12 200564 300.1/4 0 * 13 200564 5400.1/4 0 * 13 200564 5400.1/4 0 * 13 200564 5400.1/4 0 * 13 200564 5400.1/4 0 * 14 200564 5400.1/4 0 * 15 200564 5400.1/4 <td< td=""><td></td><td>2 21</td><td>119.094</td><td>5100.174</td><td>0</td><td>*</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></td<>		2 21	119.094	5100.174	0	*																						
* 11156# 300.174 0. 6 2115.6# 300.174 0. 7 2115.6# 300.174 0. 8 2115.6# 300.174 0. 9 2115.6# 300.174 0. 11 2035.6# 300.174 0. 12 2035.6# 300.174 0. 13 2035.6# 300.174 0. 14 2035.6# 300.174 0. 15 2035.6# 300.174 0. 16 2035.6# 300.174 0. 17 2035.6# 300.174 0. 18 2035.6# 300.174 0. 18 2035.6# 300.174 0. 18 2035.6# 300.174 0. 19 17 2035.6# 300.174 0. 19 2035.6# 300.174 0. 19 2035.6# 300.174 0. 19 2035.6# 300.174 0. 19 2035.6# 300.174 0. 19 2035.6# 300.174 0. 10 2035.6# 300.174 0. 118 2035.6# 300.174 0. 18 2035.6# 300.174 0. 19 10 2035.6# 300.174 0. 10 10 2035.6# 300.174 0. 10 10 2035.6# 300.174 0. 10 10 2035.6# 300.174 0. 10 10 2035.6# 30		3 21	119.694	5220.174	0	t																						
* 2115.064 \$200.174 0. * 2115.064 \$300.174 0. * 2115.064 \$400.174 0. * 2115.064 \$400.174 0. * 2115.064 \$400.174 0. * 2115.064 \$400.174 0. * 112.005.064 \$201.74 0. * 112.005.064 \$201.74 0. * 112.005.064 \$200.174 0. * 112.005.064 \$200.174 0. * 12.205.064 \$200.174 0. * 12.205.064 \$200.174 0. * 12.205.064 \$200.174 0. * 12.205.064 \$200.174 0. * 13.205.064 \$200.174 0. * 13.205.064 \$200.174 0. * 13.205.064 \$460.174 0. * 13.205.064 \$460.174 0. * 13.205.064 \$460.174 0. * 13.205.064 \$460.174 0. * 13.205.064 \$460.174 0. * 13.205.064 \$460.174 0. * 13.205.064 \$460.174 0. <td></td> <td>4 21</td> <td>119.694</td> <td>5260.174</td> <td>0</td> <td></td>		4 21	119.694	5260.174	0																							
• 7115.064 5400.174 0. • 7115.064 5420.174 0. • 7115.064 5420.174 0. • 7115.064 5420.174 0. • 7115.064 5420.174 0. • 7115.064 5420.174 0. • 7115.064 5420.174 0. • 7115.064 5420.174 0. • 7115.064 5420.174 0. • 7115.064 5420.174 0. • 7115.064 5420.174 0. • 7115.064 5420.174 0. • 7115.064 5420.174 0. • 7115.0654 5420.174 0. • 7115.0654 5420.174 0. • 7115.0654 5420.174 0. • 7115.0654 5420.174 0. • 7115.0654 5420.174 0. • 7115.0654 5420.174 0. • 7115.0654 5420.174 0. • 7115.0654 5420.174 0. • 7115.0654 5420.174 0. • 7116.075 770.075 770.075 •		5 21	119.694	5300.174	0	•																						
7 2119.64 350.174 0. 8 2119.69 340.174 0. 9 2119.69 340.174 0. 1 2039.69 310.174 0. 1 2 2039.69 320.174 0. 1 3 2039.69 350.174 0. 1 4 2039.69 350.174 0. 1 5 2039.69 350.174 0. 1 5 2039.69 350.174 0. 1 5 2039.69 350.174 0. 1 6 2039.69 350.174 0. 1 7 2039.69 350.174 0. 1 8 2039.69 350.174 0. 1 9 2039.775 0.		6 21	119.694	5340.174	0																							
* 119.994 \$200.774 0. 9 213.984 \$400.774 0. 3 10 203.984 \$180.174 0. 3 12 203.984 \$300.74 0. 3 13 203.984 \$300.74 0. 3 13 203.984 \$300.74 0. 3 14 203.984 \$203.974 0. 3 15 203.984 \$203.74 0. 3 16 203.984 \$203.74 0. 3 15 203.984 \$203.74 0. 3 16 203.984 \$203.74 0. 3 16 203.984 \$400.174 0. 3 203.984 \$400.174 0. 0. 3 203.984 \$400.174 0. 0. 3 203.984 \$400.174 0. 0. 3 203.984 \$400.174 0. 0. 4 0 0 0 0. 4 0 0 0.		7 21	119.694	5380.174	0	-																						
*** Paper Point		8 21	119.694	5420.174	0	+																						
10 2039.694 5340.174 0. 11 2039.694 520.174 0. 21 2039.694 520.174 0. 11 2039.694 520.174 0. 12 2039.694 520.174 0. 14 2039.694 520.174 0. 15 2039.694 520.174 0. 16 2039.694 540.174 0. 17 2039.694 5460.174 0. 11 2039.694 5460.174 0. 17 2039.694 5460.174 0. 18 2039.694 5460.174 0. 19 2039.694 5460.174 0. 11 10 2039.694 5460.174 0. 19 2039.694 5460.174 0. 10 10 2039.694 5460.174 0. 10 11 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10		9 21	119.694	5460.174	0	4																						
1 12039.694 5300.174 0 3 12039.694 5200.174 0 3 142039.694 5200.174 0 3 152039.694 5300.174 0 1 12039.694 5300.174 0 1 12039.694 5300.174 0 1 12039.694 5300.174 0 1 12039.694 5460.174 0 1 12039.694 5460.174 0 1 12039.694 5460.174 0 1 12039.694 5460.174 0 1 12039.694 5460.174 0 1 12039.694 5460.174 0 1 12039.694 5460.174 0 1 12039.694 5460.174 0 1 12039.694 5460.174 0 1 12039.694 5460.174 0 1 12039.694 5460.174 0 1 12039.694 5460.174 12039.694 1 12039.694 5460.174 1	2	0 20	039.694	5140.174	0																							
12 203.649 5220.174 0. 13 14 203.649 5300.174 0. 14 203.649 5340.174 0. 0. 15 203.649 5340.174 0. 0. 16 203.649 5340.174 0. 0. 17 203.649 5340.174 0. 0. 18 2039.649 5460.174 0. 0. 19 203.649 5460.174 0. 0. 118 2039.649 5460.174 0. 0. 19 51 503.649 5460.174 0. 10 203.649 5460.174 0. 0. 118 203.649 5460.174 0. 0. 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10 10	1	1 20	039.694	5180.174	0	(÷																						
3 13 2093.694 5300.174 0. 5 15 2093.694 5300.174 0. 5 16 2093.694 5300.174 0. 1 7 2093.694 5460.174 0. 1 8 2093.694 5460.174 0. 5 16 2093.694 5460.174 0. 5 17 2093.694 5460.174 0. 5 18 2093.694 5460.174 0. 5 19 2000.000 0. 5 19 2000.0000 0. 5 19 2000.0000 0. 5 19 2000.0000 0. 5 19 2000.0000 0. 5 19 2000.000000000000000000000000000000000	1	2 20	039.694	5220.174	0																							
a 14 2039.694 5300.174 0. 15 15 2039.694 5360.174 0. 16 2039.694 5460.174 0. 17 2039.694 5460.174 0. 18 2039.694 5460.174 0. 19 18 2039.694 5460.174 0. 10 19 19 19 19 19 19 19 19 19 19 19 19 19	1	3 20	039.694	5260.174	0	÷																						
S 15 209.64 540.174 0. 16 209.64 540.174 0. 17 209.64 540.174 0. 18 209.64 540.174 0. 19 209.64 540.174 0. 10 209.64 540.174 0.	1	4 20	039.694	5300.174	0	(i	8	1																				
5 16 2035,054 540,174 0. 17 2035,054 5420,174 0. 18 2035,054 5420,174 0. 18 2035,054 5420,174 0. 19 10 10 10 10 10 10 10 10 10 10 10 10 10	1	5 20	039.694	5340.174	0																							
2 17 2039.694 5420.174 0. 3 18 2039.694 5460.174 0. 7 2 17 2000 0. 7 2 10 0. 7 2 100		6 20	039.694	5380.174	0																							
a 18 2039.694 5460.174 0 . B 18 2039.694 5460.174 0 . B 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1	7 20	039.694	5420.174	0	1																						1
Image: Second		8 20	039.694	5460.174	0																							
3						ER.																						
						inter .																						
4 → M Export Point ↔																												
3 → # Expert Point (*)																												
4 → H Export. Point																												
3 + y Export. Point																												
<pre>s s s s s s s s s s s s s s s s s s s</pre>																												
7																												
* * * Export_Point_€																												
s s s s s s s s s s s s s s																												
* * * Export_Point_*																												-
4 → XI Export_Point 10																												
t t • • ≠ Export_Point_*>																												
A > H Export Point 12																												
(→ x) Export_Point /92																												
t + H Export Point A																												
43-BI Expert_Point_72				100 million														100000										-
	P PI E	xport	t_Point	191														14										F []

11.แสดงข้อมูลที่ส่งออก Point เสร็จเรียบร้อยแล้ว